



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Fiat Panda III (2011->>)

PANDA III DR


SOLARRIDE Zastlonki Fiat Panda III DR 1kg



5 904035 799180 >



Videoinstrukcja - zeskanuj kod QR
Videoinstruction - scan the QR code
Video návod - naskenujte QR kód
Instruction vidéo - scanner le code QR
Vídeo de instrucciones: escanee el código QR
Videoanleitung - Scannen Sie den QR-Code
Vídeo de instrucciones: escanee el código QR
Instruções em vídeo - digitalizar o código QR
Istruzioni video - scansione del codice QR

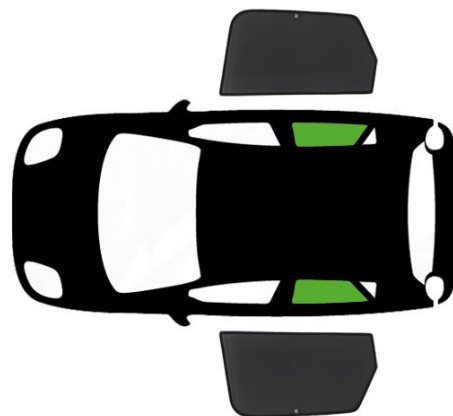

4 x



